



ADL Setup
Channel Assignments Assign a Steering Channel to the appropriate pin
Sensor Calibration Measurement method = Ratiometric Turn wheel to desired angle & enter angle in deg table. Then click on read value to read sensor., Right turn = positive angles Left turn = negative angles Straight = 0 degree

NOTE 1

ADL PINS
+ 5V Analog Pins are 18, 28, 44 0V Analog Pins are 17, 27, 33, 40, 43 Analog Volt Input Pins are 1, 2, 3, 4, 5, 19, 20, 21, 22, 23, 24, 25, 26, 45, 46, 47 48, 49, 50