



Deutsch MT04-3P

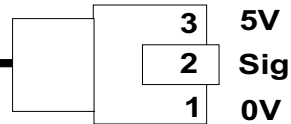

ADL

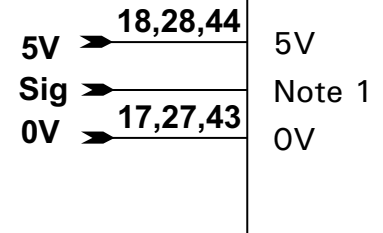

ADL Setup (to measure distance)

Channel Assignments
Assign a distance channel ie: Brake Pedal position

Sensor Calibration

1. In Calibration, select change.
2. Select Ratiometric(5V).
3. In calibration table enter the distance the pedal has moved and press "Read Value". You will end up with a table like the example.

V	mm
1.23	0
1.99	5
2.34	10
2.89	15
3.04	20

Note 1
Analog Voltage (Pins 1,2,3,4,5,19,20,21,22,23,24,25,26,45,46,47,48,49,50) or Analog Temp (Pins 34,35,36,37,38,39,41,42) input may be used.